

BLE FW Update Guide

Amp'ed RF Technology, Inc.

Update the firmware on a BLE60 module. Tools needed:

- MultithreadingProgramer_STD_V1.6.0.exe
- Windows PC
- COM port on PC
- Level shifter for RS232


Steps:

1. Connect UART0, pins 5 & 6, to PC using a RS232 level shifter with common ground, and power on the module.
2. Run "MultithreadingProgramer_STD_V1.6.0.exe" on PC.
The **first time** you start, you need to enter the password"**brt123**"
Then you can set the Bluetooth address you want




Settings:

- Selecting a configuration file (Config.BR2602e_00_220704_r8519)

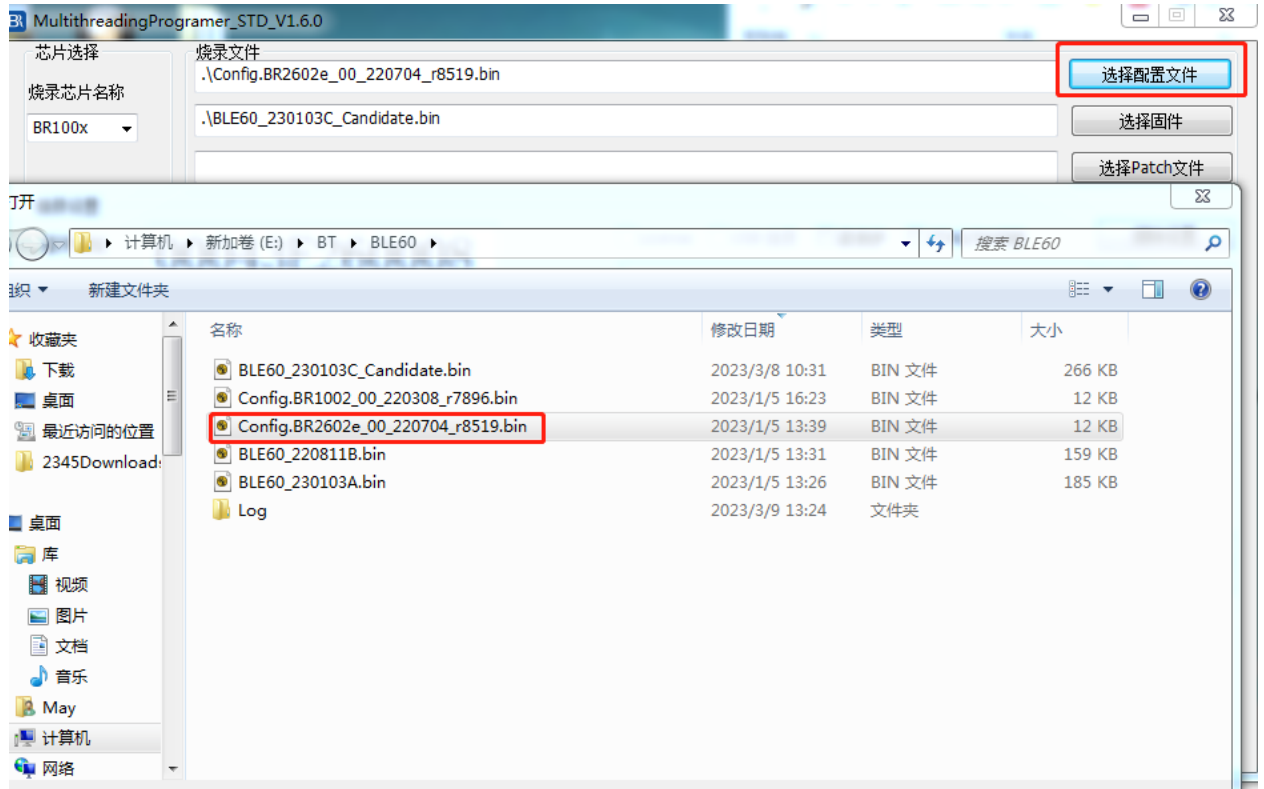

- Select Firmware

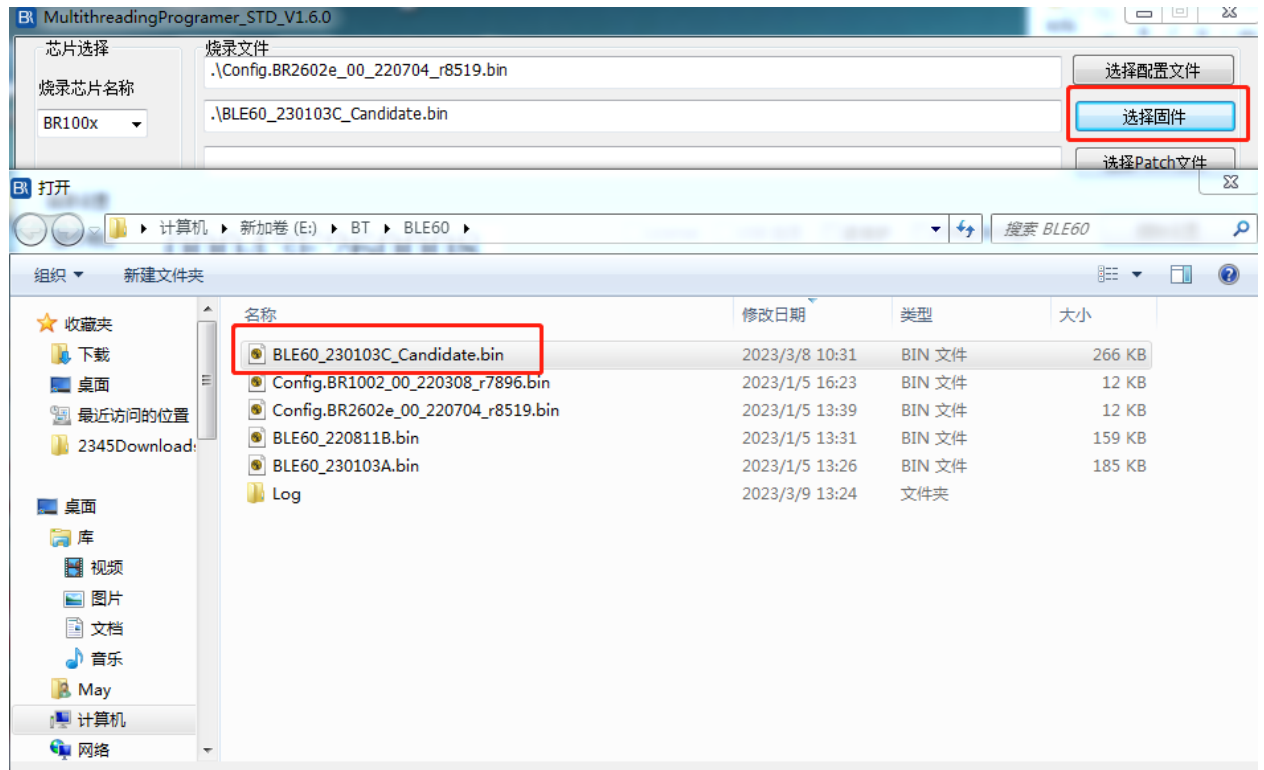

- Com Port: *Select the correct port*



- pin 9,low with GND
pin 10,reset Touch the GND; The module goes into boot
3. Click "Burn through" button



4. Click Cancel when successful



5. Open Term.exe

RESET, pin 10, Hit the ground and reset module.

Firmware update successful

